


### Cleaning and Care

In order to guarantee long-term, trouble-free use, the machine **must be cleaned at least once a day, after no longer than 12 hours of operation**. A suitable time would be before switching off at the end of the day.

In the case of 24-hour operation, the machine **must be cleaned at least one further time** during the day.

#### External Cleaning

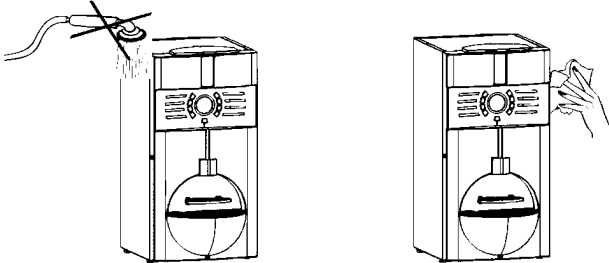

**Caution:** When cleaning the machine, parts must not be immersed in water, doused with water or sprayed down with a water hose.

Wipe down regularly all plastic parts, painted surfaces and stainless steel surfaces with a damp cloth. Do not use any abrasive substances or sharp objects.


#### Cleaning Time




Two cleaning times can be set. When one of these times has passed, and the machine has been in operation for over one hour and dispensed at least one product since last cleaning, the "time to clean" and "ready for operation" picture alternate in the display.

NOTE: No more than max. 50 products can now be dispensed. This display only disappears after a complete cleaning process has been carried out.


#### Daily Cleaning Start Cleaning

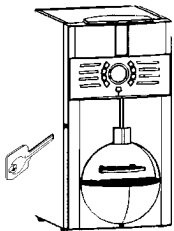


Open door with lock.

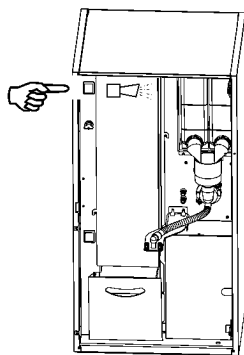


Briefly press the start key. An acoustic signal sounds.

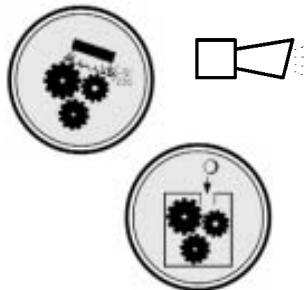


Close door. Cleaning begins with a rinsing process. No cleaning agent is required as yet. After rinsing has finished, an acoustic signal and display message indicates that the cleaning agent should now be inserted.

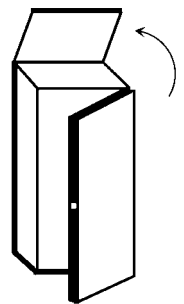


Open the door with lock and lift open lid.

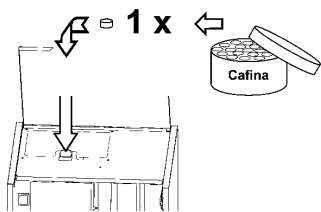

Insert 1 cleaning tablet into the opening for the cleaning agent. **Caution:** Please do not use any other cleaning agents! No liability will be accepted for resulting damage and the warranty becomes invalid!



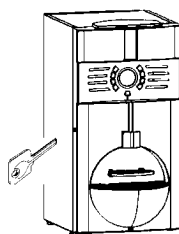


Close lid, shut and lock door.

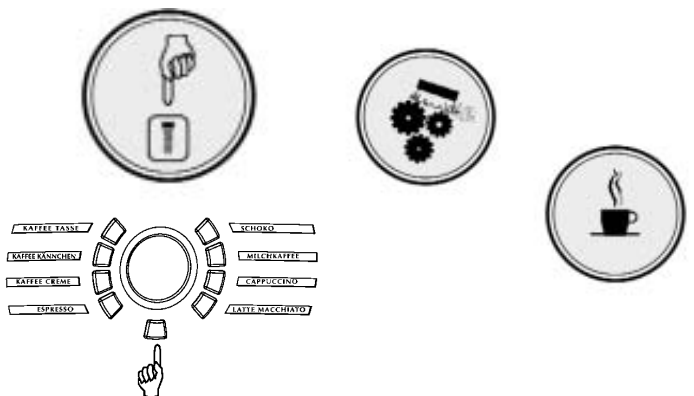

Briefly press the hot water product key.

After the cleaning process has ended (approx. 5 minutes), the machine is ready for dispensing products again.

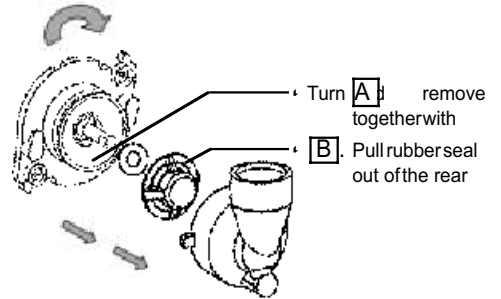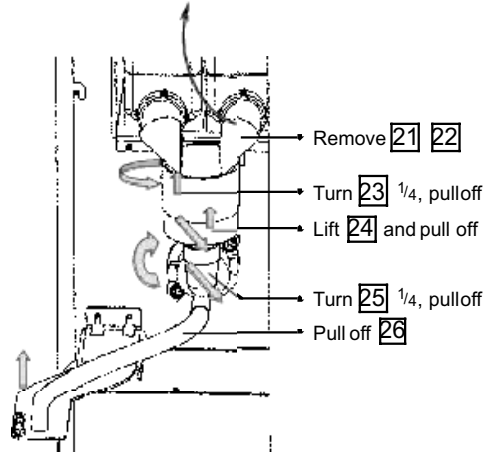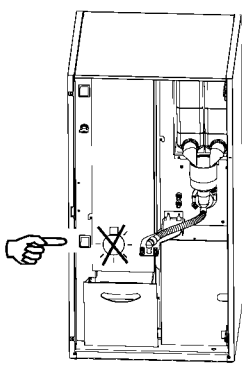

### Cleaning Mixer Unit

Switch machine off using power switch so that the switch is no longer lit.

The complete mixer unit 21, 22, 23, 24, 25, 26 for instant products is to be cleaned thoroughly at least once a day.

Turn powder chutes 21, 22 to face upwards, lift instant tanks slightly and pull forward out of machine. Pull off powder chutes and remove any instant products stuck to them.




Turn funnel 23 1/4 turn to the left and pull off upwards.

Lift mixer housing 24 and pull forward out of unit.

Pull outlet tube for instant beverages 26 out of mixer unit 25 and, at the front end, out of the beverage outlet spout.

Loosen the mixer unit 25 by giving it a 1/4 turn to the right. Remove by pulling it forward and out of the machine.

Loosen the mixer flange A by giving it a 1/4 turn to the right. Remove together with the mixer propeller B by pulling off the axle. Pull the rubber seal out of the rear of the mixer propeller.

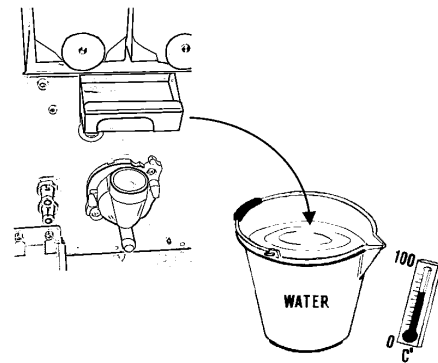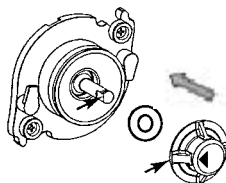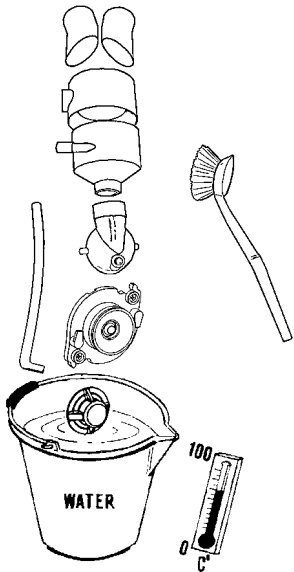

Clean all parts thoroughly with hot water and a detergent suitable for milk products. You can also use the cleaning tablets. Dissolve 2 tablets/1 liter of water.

Rinse thoroughly in clean water.

Rub all parts thoroughly dry.

Clean the uncovered feed screws of the instant beverage tanks (concealed behind the powder chutes 21, 22) with a dry dusting brush.

Assemble the parts again in reverse order.

Please Note:

Replace mixer propeller with thick rib/arrow to flattened side of axle. Push firmly until a clear clicking noise is heard.

Do not mix up left and right powder chutes.

Please Note:

The outlet tube for instant beverages must be pushed completely onto the connection at the mixer unit and, at the front end, pushed down fully into the beverage outlet spout. The funnel must be turned in such a way that the oval air slit points backwards towards the machine housing.

### Weekly Cleaning

The powder hoppers must be emptied at least once per week and cleaned with a dry dust brush. Remove any parts stuck to the tanks.

### Monthly Cleaning

Pull out the small drawer behind the air slit of the funnel 23 and clean.

Empty the powder hoppers at least once per month. Clean with hot water and a detergent suitable for milk products. You can also use the combined cleaning tablets, Order No. 2900018. Dissolve 2 tablets/1 liter of water. Rinse with clean water.

Important! All parts must be dried thoroughly before reassembling.