



1. Insert a BUNN® filter into the funnel.



2. If a grinder is not used to obtain the coffee grounds, pour in fresh coffee.



3. Shake funnel gently to level grounds.



4. Slide funnel into funnel rails of the brewer.



5. Place empty servers beneath the funnel.



6. Select the desired batch size.



7. The **ON/OFF** switch must be in the "ON" position.




8. Momentarily press and release the **BREW** switch. If the brewer has the funnel lock option and it is activated, the funnel is locked in place.

9. There may be some situations in which the brew cycle will not begin when the BREW switch is pressed.

- a) **ON/OFF** must be ON.
- b) **BREW TEMPERATURE TOO LOW** - wait until heated or cancel **BREW LOCKOUT** option.
- c) **FUNNEL NOT IN PLACE** (or using a standard brew funnel) - cancel **FUNNEL DETECT**.
- d) **CHECK FUNNEL** - remove funnel, empty previously brewed grounds and grind a new batch into the funnel.



10. If none of the previous messages are displayed, the display will read **NOW BREWING** and the time remaining in the brew cycle.

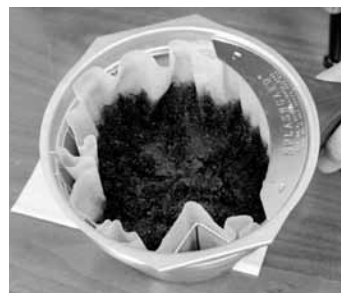

11. Following the BREW will be a countdown of **DRIPPING** time which shows the time remaining until the funnel lock will release. Discard the grounds and filter only after visible dripping stops.



1. Clean and sanitize funnels.



2. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean both sides of the sprayhead panel.



3. Remove sprayheads from brewer. Disassemble by removing the seal.



4. Insert the long end of sprayhead cleaning tool into the sprayhead fittings, and rotate several times to remove any mineral deposits from the fitting.



5. Use the pointed end of sprayhead cleaning tool to remove any mineral deposits from the sprayhead holes. The sprayhead holes must always remain open.

NOTE: Any buildup on the sprayhead and fitting may restrict water flow, and impact your coffee brewing. For consistently great coffee, clean sprayheads and fittings weekly with sprayhead cleaning tool (#38227.0000). Upon visual inspection it may appear that light passes through all holes in the sprayhead plate, but a thin film of residue can pass light and still impede water flow.



6. Reassemble sprayheads and reattach. Sprayheads only need to be hand tightened.

See installation and operating manual for calibration routine to verify sprayhead flow rate matches programmed flow rate. Machine may need to be recalibrated due to lime build up or the use of alternate designed sprayheads. If machine is cleaned and build up removed, machine must be re-calibrated to achieve desired volumes.



7. The use of a damp cloth rinsed in any mild, nonabrasive, liquid detergent is recommended for cleaning all surfaces on Bunn-O-Matic equipment. Do **NOT** clean this equipment with a water jet device.